

## Compact lever above water installation



1  
Valve is supplied pre-assembled for 1" compact lever above water installation. Apply PTFE thread tape to thread in a clockwise direction, ensuring thread is adequately covered.



2  
Screw the float valve into the trough inlet, using the body, by hand until tight.



3  
Valve body is suitable for final tightening with a wrench/multigrips to ensure perpendicular.



4  
Using a Phillips head screwdriver adjust the float to one of the three positions on the lever to achieve desired water level

## Float lever extension & adjustment



1  
Unscrew the float using Phillips head screwdriver



2  
Attach supplied lever extension to short lever



3  
The lever has 3 positions for flexibility and easy adjustment of the water level



4  
Attach the float which also has three positions of adjustment



5  
Ensure valve is perpendicular and turn on the water supply

**Note:** OptiPHIL float valve has a mounting tolerance of +/-5° from the vertical